

# Key Fobs



Version 1 - 1 1/4" wide cotton webbing and 3/4" - 1" wide ribbon.

Version 2 - 1 1/4" wide cotton webbing and 2" cut fabric.

Version 3 - 5" wide cut heavy weight fabric like denim, duck, twill, home dec fabrics, etc.

Also needed: Fraycheck, pliers, scrap batting or soft fabric, and key fob hardware.

Key fob hardware and cotton webbing is available online through Etsy, eBay, Amazon, etc. Most common size is 1 1/4", but you may be able to find 1" (fabric, webbing and ribbon measurements would change.)

## Version 1: Ribbon

Cut an 11" piece of 1 1/4" cotton webbing.

Cut an 11" piece of 3/4" - 1" ribbon.

Center ribbon on webbing and sew 1/8" from the edges of the ribbon on both sides.





## Version 2: Fabric

Cut an 11" piece of 1 1/4" cotton webbing.

Cut an 11" piece of cotton fabric 2" wide.

Fold fabric in half lengthwise and press. Open and fold each edge to the center, then press.

Center fabric on webbing and sew 1/8" from the edges of the fabric on both sides.




## Version 3: Denim

Cut an 11" piece of heavy weight fabric 5" wide.

Fold fabric in half lengthwise and press. Open and fold each edge to the center, fold again, then press.

Sew 1/8" from both edges, starting with the double folded side. Make several rows of stitching evenly spaced across the strap. Use brightly colored thread for contrast.

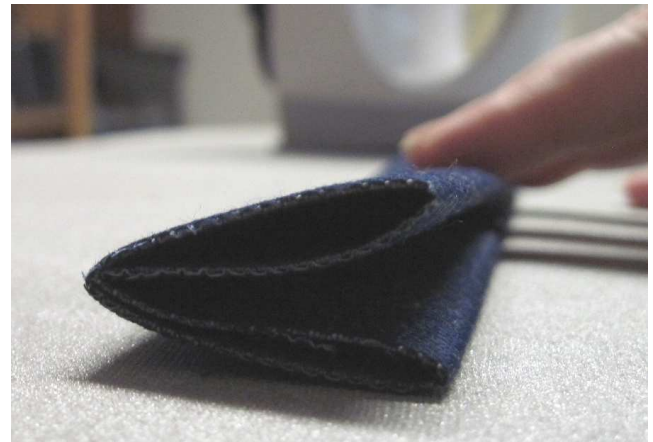





Fraycheck the edges thoroughly. Trim any hanging threads, if necessary. Let dry for a minute or two.



Place the edges inside the jaws of the hardware. Make sure the fabric is all the way in and the teeth are biting into the fabric.



Use pliers to tighten the jaws of the hardware, but be sure to put a scrap of batting or thick fabric between the pliers and the metal, otherwise you will scratch or dent the hardware.